

Parameters

Model	DDA-120DT
Channel Number	1
Audio Input	
Transmission	Dante
Connector	1x RJ-45
Audio Output	
Peak Power	120W@4Ω 60W@8Ω
Power Supply	
Power Input	PoE/PoE+/PoE++



Troubleshooting

If the device cannot be detected or connected to, please check the following:

1. Network cable: Ensure correct wire sequence and no breakage.
2. Network segment: Confirm the computer and device are on the same segment.

If there is no signal output from the device, please check the following:

1. Network cable: Ensure proper connection and no poor contact.
2. Output ports: Verify correct connection, wire sequence and no poor contact.
3. Dante subscription: Check if it is subscribed and connected properly.

4. Output signal: Ensure it is not excessively strong, which may trigger the device's protection mechanism.

Package Contents

DDA-120DT	PoE module*1 Terminal block*1 Screwdriver*1 Quick Guide*1
------------------	--

DDA-120DT Quick Guide

Thank you for choosing to use our PoE module. Before using the product, please read this user manual carefully, as the product is constantly being upgraded and may undergo changes without further notice.

Product Layout

DDA-120DT

Output Connector: 5.08-2P Socket
Dimension(LxWxH):178x82x44mm



Wiring

DDA-120DT

pin	1	2
channel	Out-mono	
	-	+

Software

The software main interface is divided into four areas, 1 corresponding to device bar, 2 for mainfunction pages, 3 for toolbar and 4 for meter and level control.

